
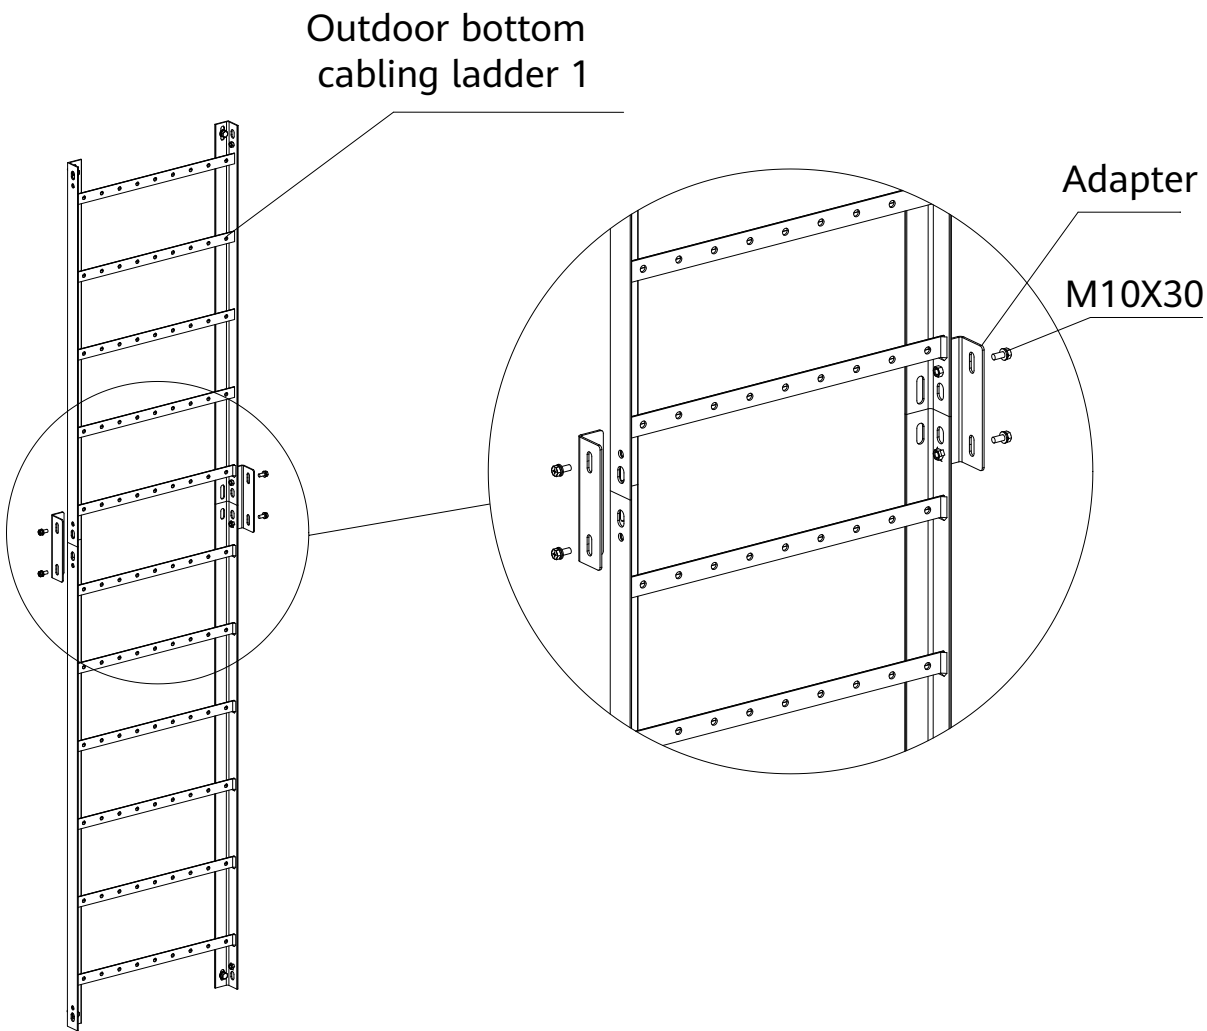


NO.S005 External Cable Tray Installation Position Diagram

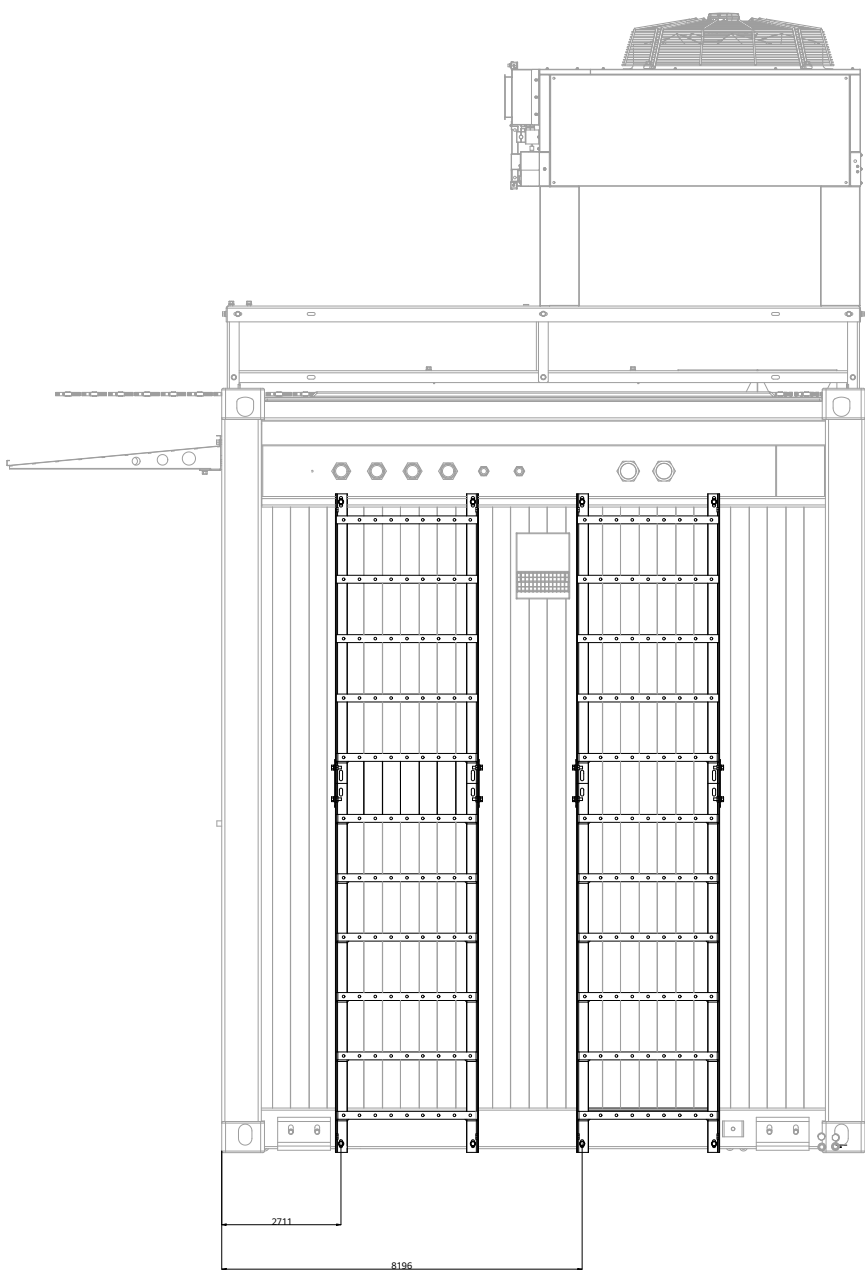

Key installation technical points and precautions
1. Use an adapter to combine two small cable trays into one large cable tray. Tightening torque: 20 N·M.

No.	Installation Procedure					Acceptance Criteria	Special Tool
1	Locate the external cable tray installation position, and remove the rubber plugs from the corresponding mounting holes in the pre-fab. module using a flat-head screwdriver.					-	-
2	Align the ends of long and short cable trays, and secure the long and short cable trays using adapters.					-	-
3	Secure the cable tray to the ports reserved on the pre-fab. module.					-	-
1	21260929	Self-prepared cabinetp	DKBA40710423	Bottom cabling ladder	1500X400X40	2	pcs
No.	BOM Code	Container No.	Drawing No.	Name	Specifications	Qty	Unit

REVISIONS		
NO.	DESCRIPTION	DATE
NOTE:		
PROJECT		
DRAWING TITLE		
CHECKED BY /DATE		
DRAWN BY /DATE		
DESIGNED BY /DATE		
CLIENT		
SCALE		STATUS
DATE		DRAWING NO.